

Notice— PLEASE READ THESE
 INSTRUCTIONS CAREFULLY

*Be sure you know the correct prefix
 and number of the Telephone wanted*

Then: REMOVE THE RECEIVER FROM THE HOOK. Place the finger in the dial hole over the letter prefix of the number wanted and turn the dial till the finger touches the stop. Hold the finger against the stop until the trigger clicks. In the same way, pull the **figures** of the number, one after the other. The bell of the called telephone then rings in short periods until answered. If the called line is busy, a "busy-signal" tone will be heard. Hang up the receiver and wait a few minutes before calling that number again

IMPORTANT

If you wish to call another number, or if you make a mistake in calling, hang up the receiver and take it down again before re-starting to call. Hang the receiver on the hook when through talking.

To ask for Information, call C01.

To report the telephone out of order, call as follows: Pull first the prefix letter of the telephone complained of, then the figures 02. For example:

If the prefix letter is C, call C02
“ “ “ “ J, “ J02
“ “ “ “ M, “ M02
“ “ “ “ S, “ S02